



# LUBRICATION INSTRUCTION AIR TREATMENT UNIT

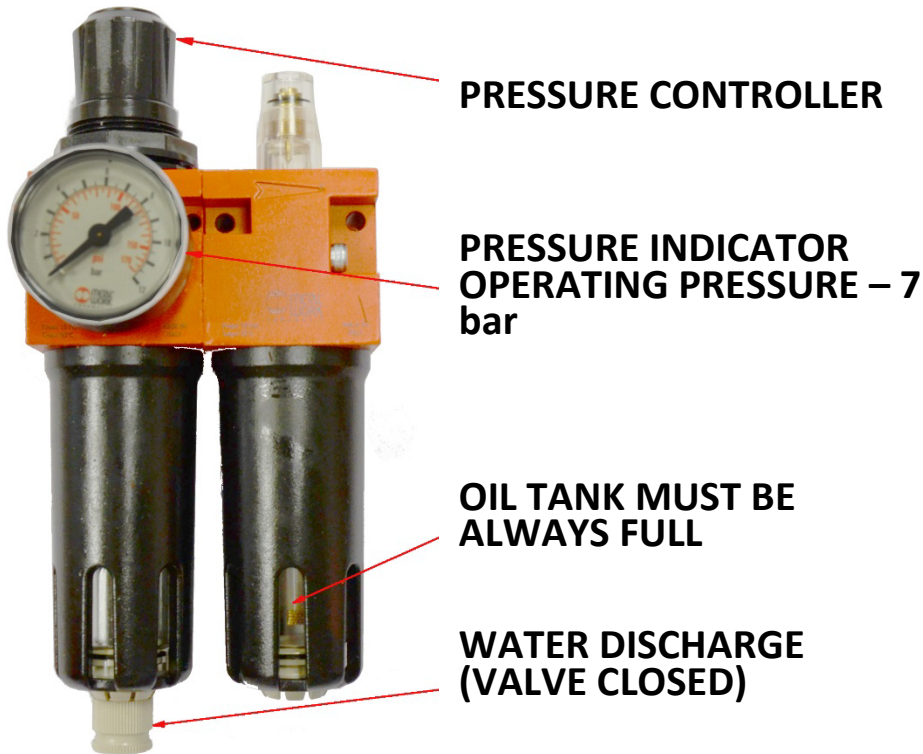

## FILLING PROCEDURE:

- **RELEASE THE PRESSURE CONTROLLER**  
Pull the knob up; then, set the pressure to “0” value with turning motion;
- **REMOVE THE OIL TANK COVER**
- **DISCONNECT OIL TANK AND FILL IT**  
(Use oil intended for pneumatic system lubrication only, i.e. -45°SHF-LT15)
- **CONNECT THE TANK AND ASSEMBLE THE COVER**
- **ADJUST THE PRESSURE**  
(operating) to 7 bar
- **LOCK THE OIL CONTROLLER**  
Push the knob of pressure controller down.

# LUBRICATION INSTRUCTION AIR TREATMENT UNIT

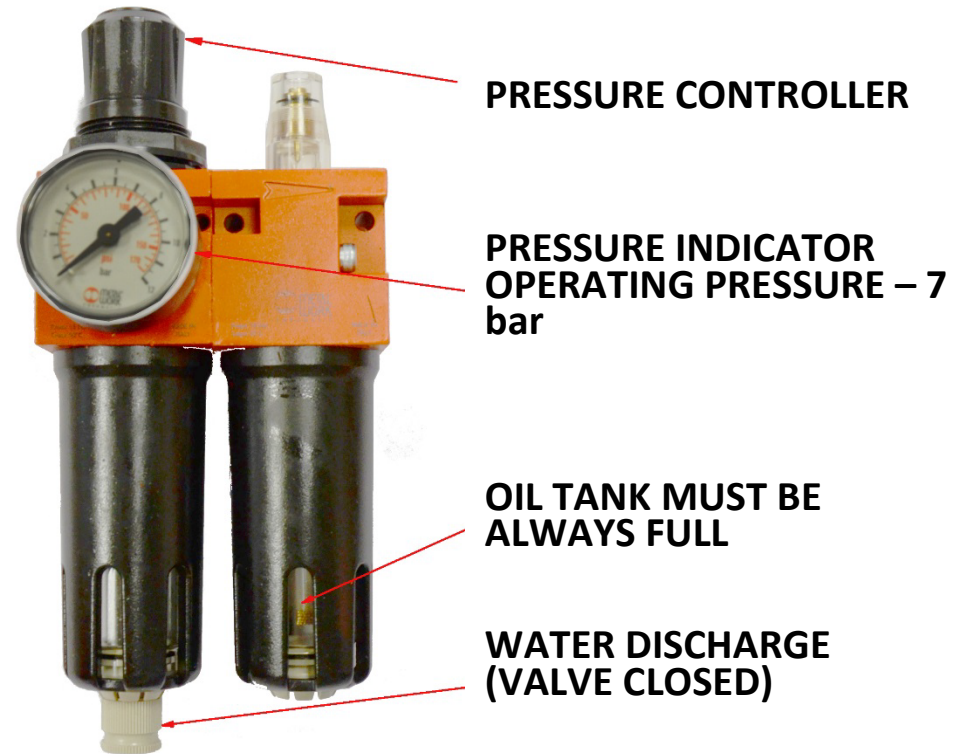

## FILLING PROCEDURE:

- **RELEASE THE PRESSURE CONTROLLER**  
Pull the knob up; then, set the pressure to “0” value with turning motion;
- **REMOVE THE OIL TANK COVER**
- **DISCONNECT OIL TANK AND FILL IT**  
(Use oil intended for pneumatic system lubrication only, i.e. -45°SHF-LT15)
- **CONNECT THE TANK AND ASSEMBLE THE COVER**
- **ADJUST THE PRESSURE**  
(operating) to 7 bar
- **LOCK THE OIL CONTROLLER**  
Push the knob of pressure controller down.