

# TANK CLEANING INSTRUCTIONS

## 1. For the first three months:

- Wash only with cold water.
- Do not use pressure or steam cleaners.

## 2. After three months:

- Can be cleaned with pressure and steam cleaners.
- Minimum distance between the lance and the paintwork: 30cm.
- Maximum water temperature: 50°C.
- pH of detergent: 8÷9.

## 3. Aluminium and stainless steel have limited resistance to salts and iron-containing elements (sand, brake dust). Therefore, especially in winter, the cleaning of stainless steel and aluminium parts should be carried out regularly.